




Cool Camo Cuff

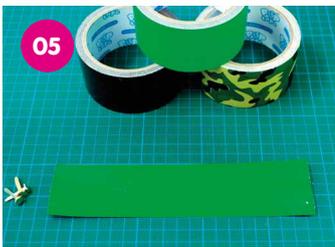

SUPPLIES AND TOOLS:

- POPTape™: Loud Lime, Cool Camo, Black As Night.
- 5 x 19mm Paper Fasteners or Scrapbooking Brads.
- Scissors/Craft Knife.
- Paper Punch.

SKILL LEVEL: Beginner

Step 1

To make the cuff band, cut or tear 2 pieces of Cool Camo POPTape, long enough to go around your wrist with 6cm extra to allow for trimming and the join. Join the 2 pieces sticky sides together to create POPTape fabric (a double sided piece of tape).

Step 2

Tear or cut a length of black tape the same size as your camo cuff band. Tear or cut the black piece down the centre lengthways to create 2 narrow strips. Add a black

border 1.5cm wide to your camo band. Fold the excess black over to the back of the band. Repeat on the other side so you have a 1.5cm black border both sides.

Step 3

Repeat Step 2 with Loud Lime POPTape, but make a smaller border of 7mm. Fold the excess green over to the back. Trim any excess tape off at the ends.

Step 4

To add the studs, find the centre point of your cuff band and push through the

first paper fastener, open and fold out the pins at the back. Repeat with the other 4 fasteners, 2 each side of the first one and inserted 2cm apart.

Step 5

Turn over the cuff band and cover the back with a strip of Loud Lime POPTape to cover the sharp edges of the paper fasteners.

Step 6

To enclose your cuff, use a paper punch to make 2 holes at each end. They should be at least 1.5cm in

from the outside edge. Cut or tear a 15cm piece of Cool Camo and fold it in half lengthways. Cut a 5mm wide strip to use as the tie.

Step 7

Bring the ends of your cuff together, thread the tie through the holes at both ends of the cuff, and bring the tie through from the inside of the cuff to the outside. Put the cuff on your wrist and tie a loose double knot to keep it in place.